



44Q700

Illustrated Parts List

Model Series

44Q700



TYPE NUMBERS
0001 THROUGH 5583.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

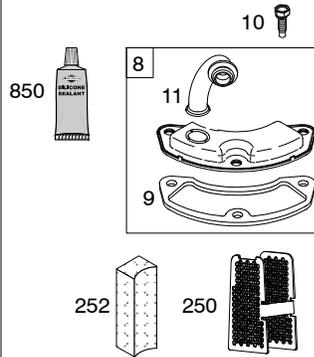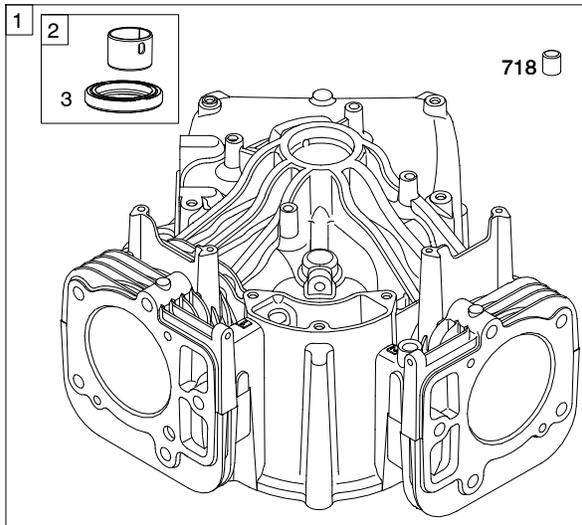

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.








1319A WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL


1036 EMISSIONS LABEL

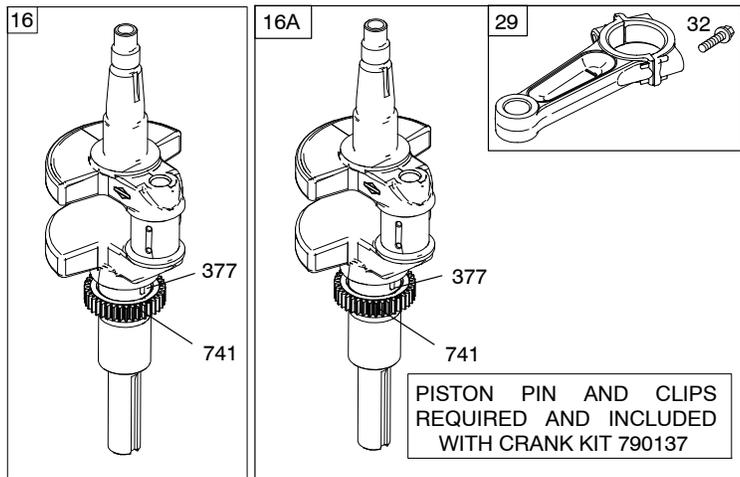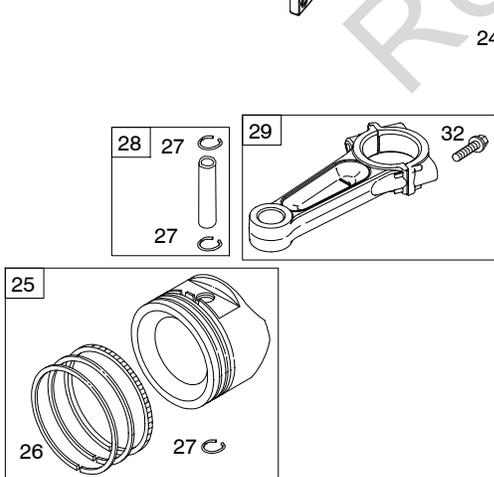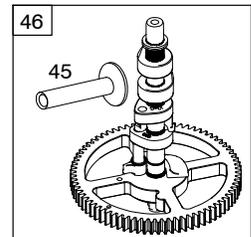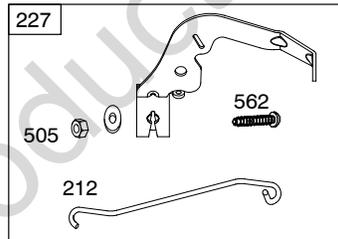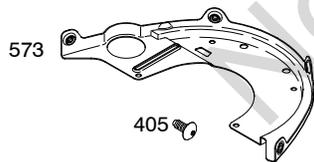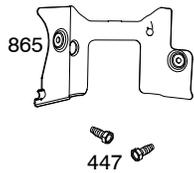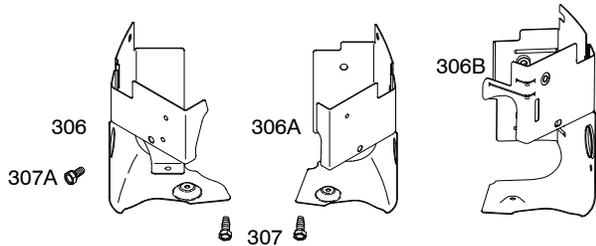


44Q700

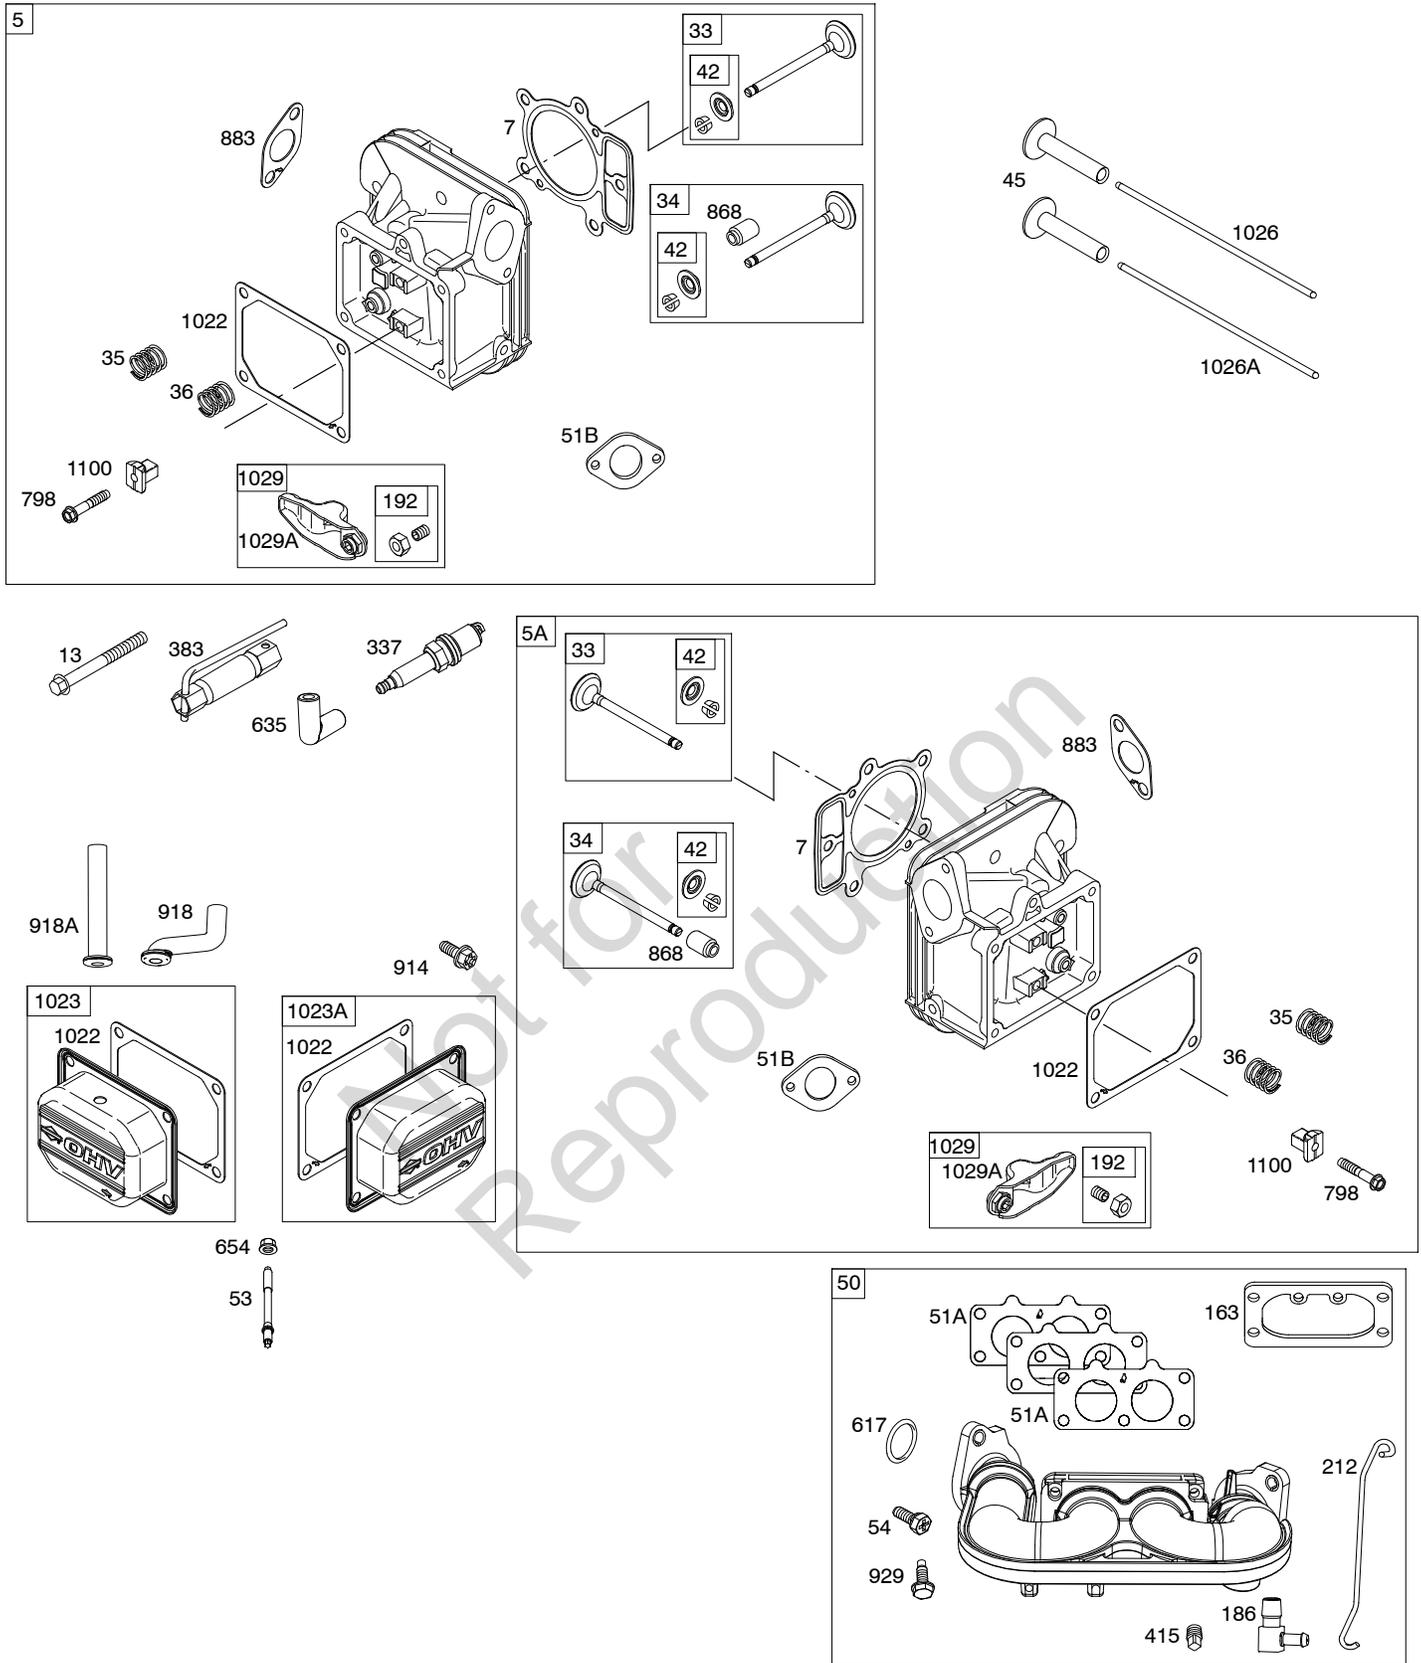
















Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-4 Assemblies include all parts shown in frames. **01/09/2014**

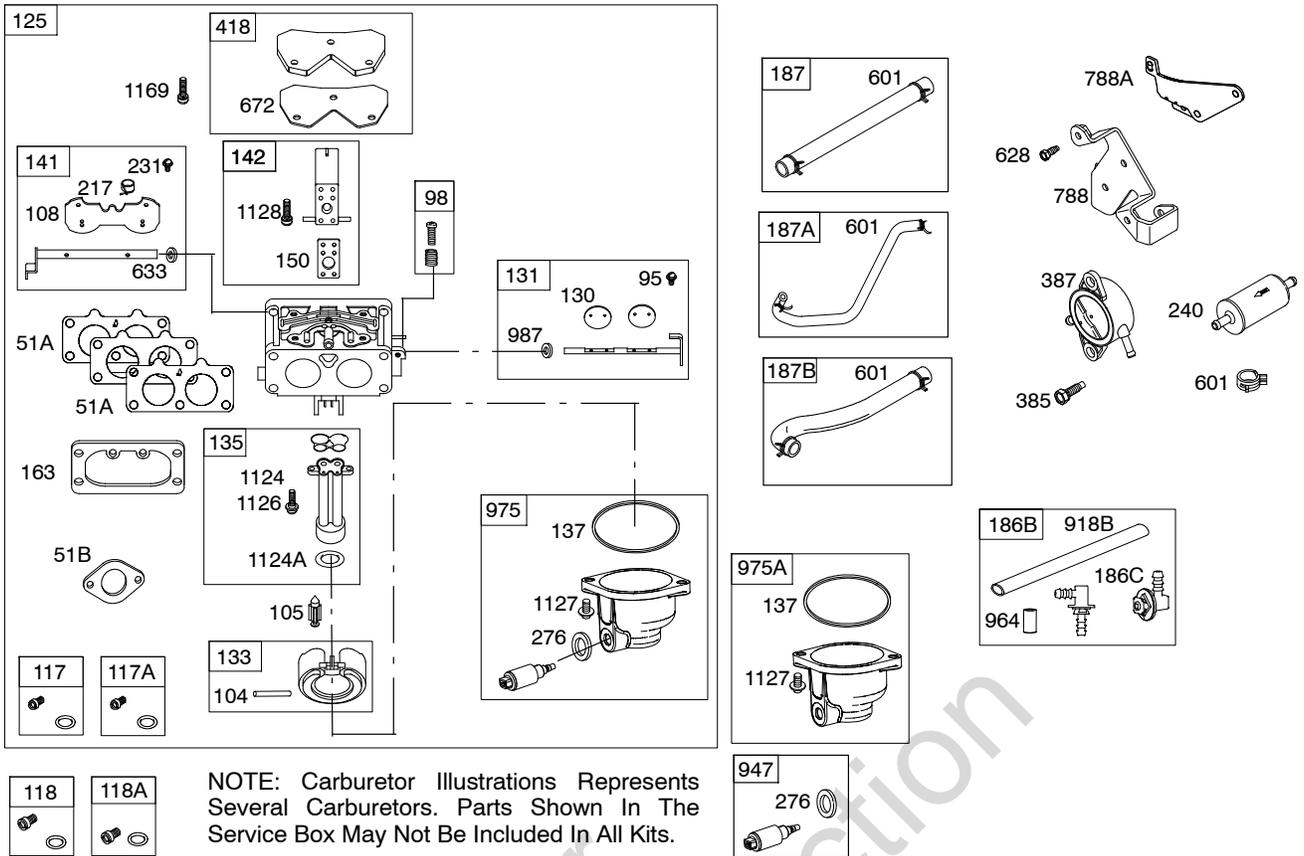




















44Q700

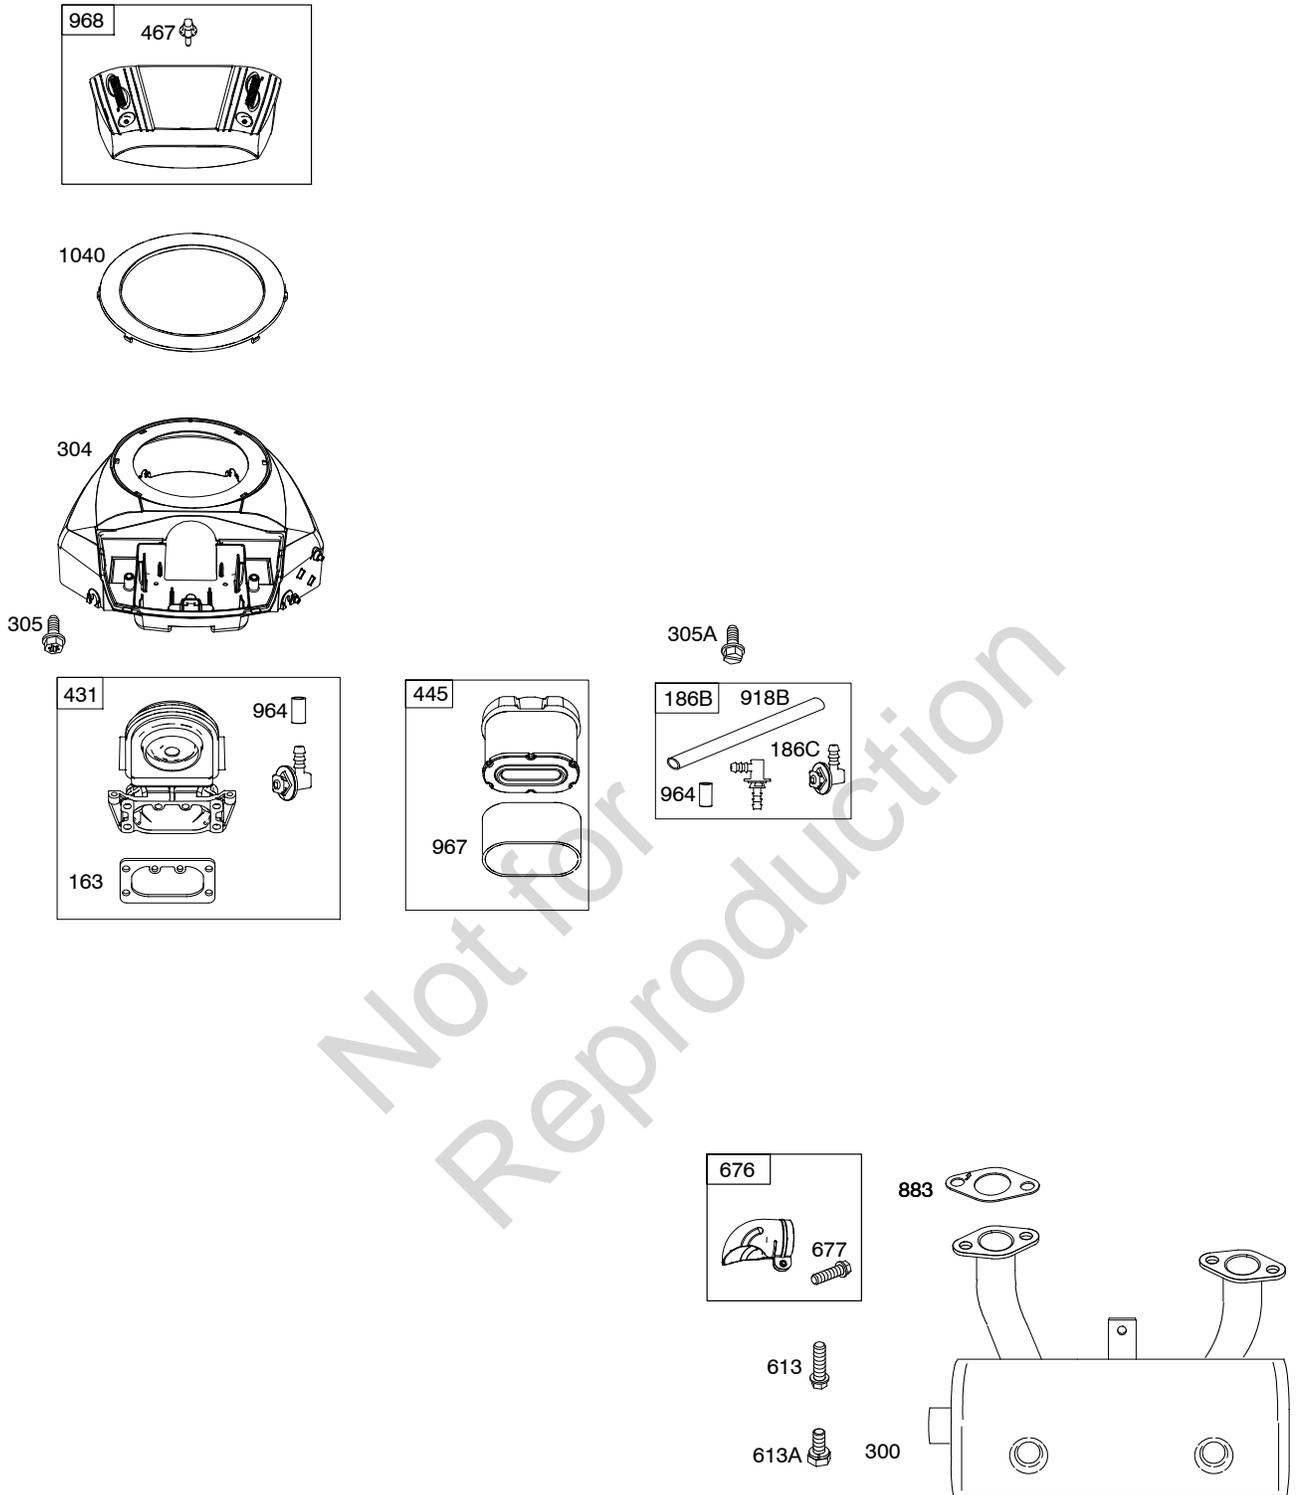




Not for
Reproduction

        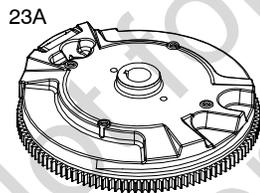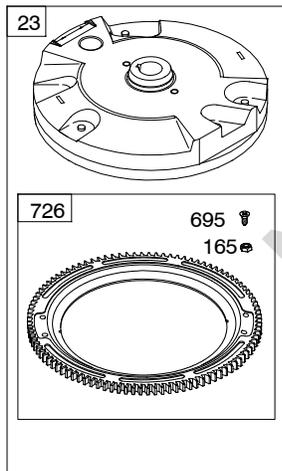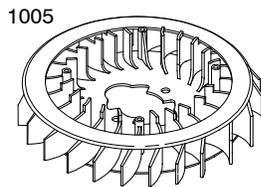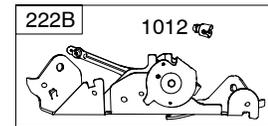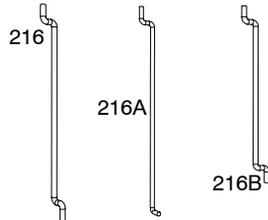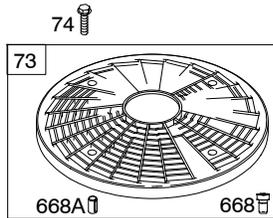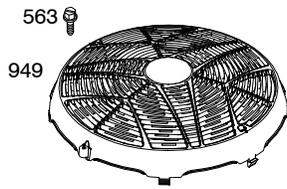

Not for
Reproduction

 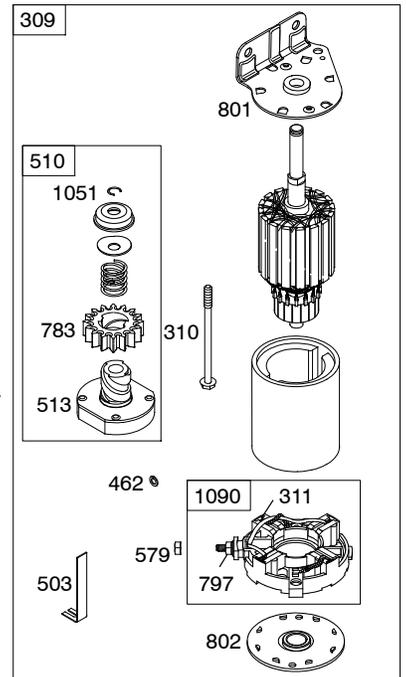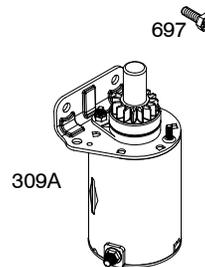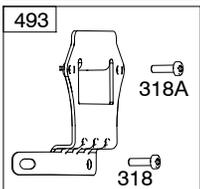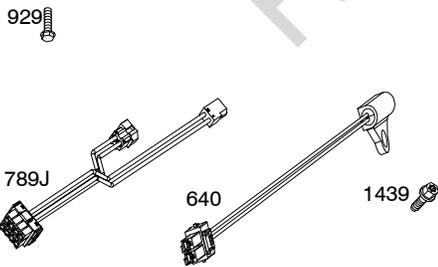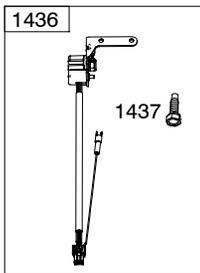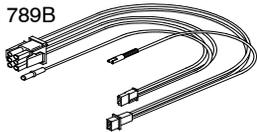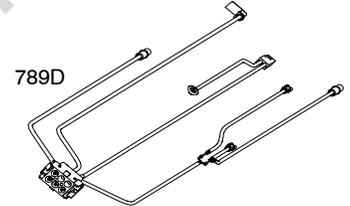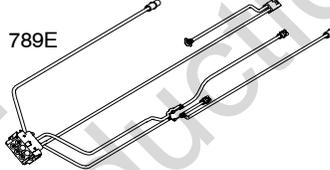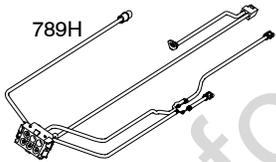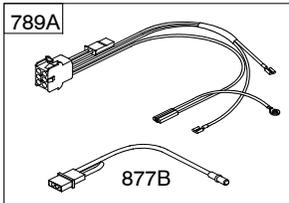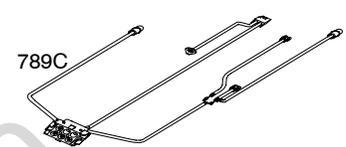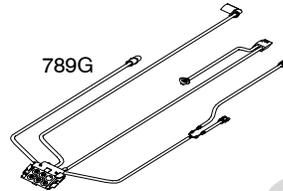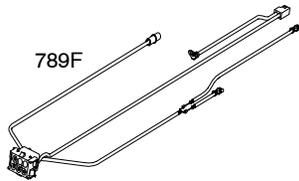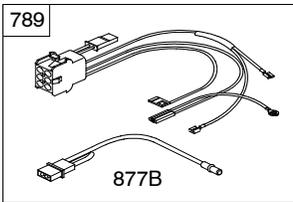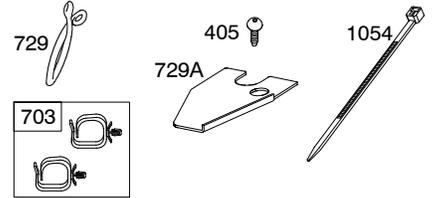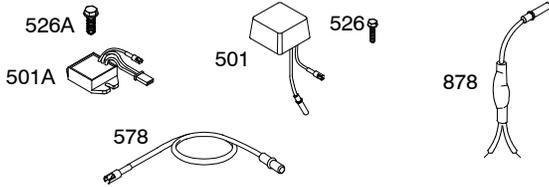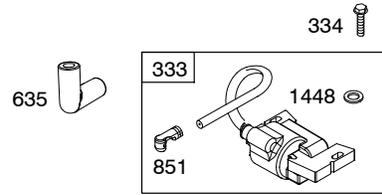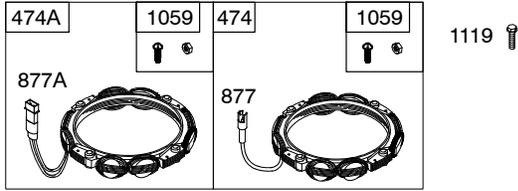

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3533-8 Assemblies include all parts shown in frames. 01/09/2014

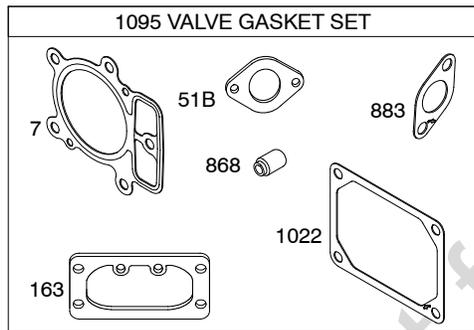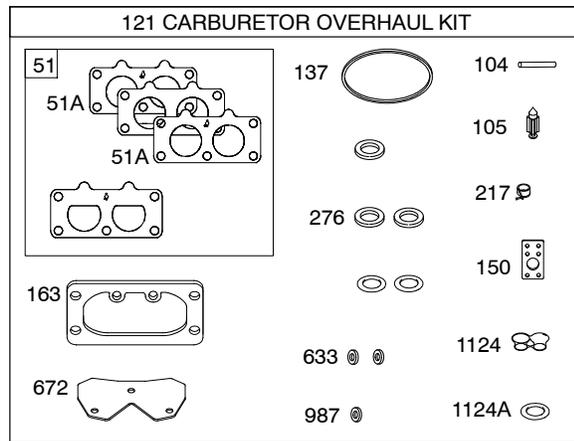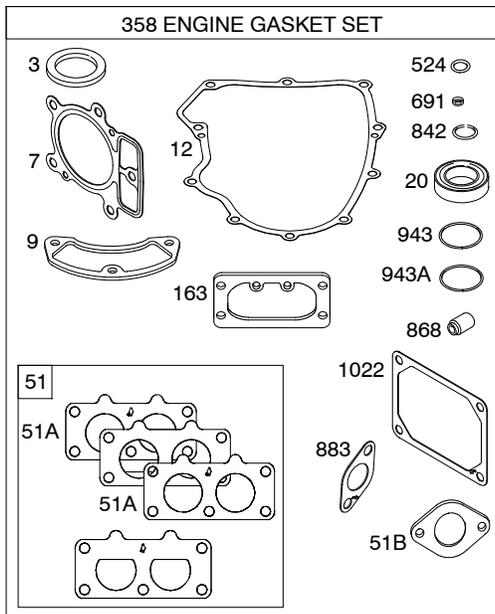

Not for
Reproduction

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	591695	Cylinder Assembly		796237	Crankshaft		793563	Piston Assembly
2	797673	Kit-Bushing/Seal (Magneto Side)			Used on Type No(s). 0001, 0003, 0027, 0037, 0047, 0111, 0112, 0121, 0127, 0128, 0129, 0137, 0138, 0140, 0141, 0143, 0146, 0147, 0148, 0151, 0152, 2138, 2141, 2143, 3047, 3137, 5121, 5137, 5138, 5141, 5143, 5146, 5147, 5148.			Assembly (.020" Oversize)
3	391086s	Seal-Oil (Magneto Side)						792072 Piston-Assembly (.020" Oversize)
4	796307	Sump-Engine						Used on Type No(s). 0001, 0003, 0152, 4406, 5046.
5	799088	Head-Cylinder (Cylinder 1)				26	792026	Ring Set (Standard)
5A	799089	Head-Cylinder (Cylinder 2)						----- Note -----
7	693997	Gasket-Cylinder Head						792073 Ring Set (.020" Oversize)
8	792185	Breather Assembly				27	690975	Lock-Piston Pin
9	690937	Gasket-Breather				28	690229	Pin-Piston (Standard)
10	691108	Screw (Breather Assembly)						----- Note -----
11	792184	Tube-Breather						696581 Pin-Piston (Standard)
12	591911	Gasket-Crankcase						Used on Type No(s). 0001, 0003, 0006, 0035, 0036, 0037, 0046, 0047, 0120, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1208, 1272, 1406, 1583, 1604, 3138, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.
13	793988	Screw (Cylinder Head) (Used After Code Date 08063000).	16A	790137	Crankshaft (Includes Connecting Rod, Piston Pins, And Clips) (Used Before Code Date 08080100). Used on Type No(s). 0025.			
		----- Note -----						
		791130 Screw (Cylinder Head) (Used Before Code Date 08070100).						
15	691680	Plug-Oil Drain (Used Before Code Date 08071800).	20	795387	Seal-Oil (PTO Side)			
15A	690946	Plug-Oil Drain (Used After Code Date 08071700).	22	694966	Screw (Crankcase Cover/Sump)			
16	796256	Crankshaft (Used on Type No(s). 0006, 0036, 0046, 0120, 0126, 0136, 0142, 0145, 0149, 1208, 1272, 1406, 1583, 1604, 2406, 3136, 4406, 5046, 5136, 5142, 5145, 5149, 5583.	23	691053	Flywheel			
		----- Note -----	23A	799090	Flywheel (Used on Type No(s). 0001, 0003, 0151, 0152, 3047, 3135, 3136, 3137, 5121, 5136, 3137, 3138, 5046, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			
		796257 Crankshaft (Used on Type No(s). 0035, 0125, 0135, 3135.	24	222698s	Key-Flywheel			
			25	793560	Piston Assembly (Standard)			
								----- Note -----
								792023 Piston-Assembly (Standard) (Used on Type No(s). 0001, 0003, 0152, 4406, 5046.
						29	796209	Rod-Connecting (Standard)
						32	690976	Screw (Connecting Rod)
						33	793557	Valve-Exhaust
						34	793556	Valve-Intake
						35	694865	Spring-Valve (Intake)
						36	694865	Spring-Valve (Exhaust)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3533-10 Assemblies include all parts shown in frames. 01/09/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
42	499586	Keeper-Valve	98	699721	Kit-Idle Speed	118	699457	Jet-Main
45	690977	Tappet-Valve	104	694918	Pin-Float Hinge			(High Altitude)
46	793663	Camshaft (Used After Code Date 07012800).	105	797410	Valve-Float Needle			(Left)(Nikki)
		----- Note -----	108	699723	Valve-Choke			----- Note -----
		792555 Camshaft (Used Before Code Date 07012900).	117	792296	Jet-Main (Standard) (Left)(Nikki)			791502 Jet-Main (High Altitude) (Left)(Nikki)
		797242 Camshaft Used on Type No(s). 0001, 0003, 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			----- Note ----- 842585 Jet-Main (Standard) (Left)(Nikki) Used on Type No(s). 0001, 0003, 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			Used on Type No(s). 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.
50	591784	Manifold-Intake (Used After Code Date 12040200).	117A	842627	Jet-Main (Standard) (Right)(Nikki)	118A	699733	Jet-Main (High Altitude) (Right)(Nikki)
		----- Note -----			----- Note -----			----- Note -----
		695241 Manifold- Intake (Used Before Code Date 12040300).			842585 Jet-Main (Standard) (Right)(Nikki) Used on Type No(s). 0001, 0003, 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			791502 Jet-Main (High Altitude) (Right)(Nikki) Used on Type No(s). 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.
51	795123	Gasket-Intake						
51A	690950	Gasket-Intake						
51B	690949	Gasket-Intake						
53	690951	Stud (Carburetor)						
54	699816	Screw (Intake Manifold)						
73	494439	Screen-Rotating						
74	698425	Screw (Rotating Screen)						
75	691056	Washer (Flywheel)						
95	690718	Screw (Throttle Valve)				121	797890	Kit-Carburetor Overhaul
						125	792295	Carburetor ----- Note ----- 796227 Carburetor Used on Type No(s). 0006, 0035, 0036, 0037, 0125, 0126, 0127.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		796997 Carburetor Used on Type No(s). 0001, 0003, 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			(Orange) (Used Before Code Date 10072300). Used on Type No(s). 0111.
		796227 Carburetor (Used After Code Date 09010400). Used on Type No(s). 0120, 1208, 1272.	146	690979	Key-Timing			796224 Spring- Governor (Yellow/Black) (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0128, 0143, 1272.
		792295 Carburetor (Used Before Code Date 09010500). Used on Type No(s). 0120, 1208, 1272.	150	841649	Gasket-Nozzle			795086 Spring- Governor (Light Blue) (Used Before Code Date 10072300). Used on Type No(s). 0120.
130	690993	Valve-Throttle	163	691001	Gasket-Air Cleaner			796828 Spring- Governor (Dark Green/Brown) (Used Before Code Date 10072300). Used on Type No(s). 0129, 0138, 0140, 0141, 0147.
131	499805	Kit-Throttle Shaft ----- Note ----- 799113 Kit- Throttle Shaft Used on Type No(s). 0001, 0003, 0152, 4406, 5046.	165	693148	Nut (Ring Gear)			
		133 699724 Float-Carburetor	186	795985	Connector-Hose			
		135 699729 Tube-Fuel Transfer	186A	796532	Connector-Hose (Oil Drain)			
		137 690994 Gasket-Float Bowl	186B	799158	Connector-Hose (EVAP)			
		141 796228 Kit-Choke Shaft	186C	845141	Connector-Hose (EVAP)			
		142 699726 Nozzle-Carburetor (Standard) ----- Note ----- 796871 Nozzle- Carburetor (Standard) Used on Type No(s). 0001, 0003, 0046, 0047, 0121, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141,	187	791766	Line-Fuel (Cut to Required Length)			
			187A	791881	Line-Fuel (Molded)			
			187B	791801	Line-Fuel (Molded)			
			188	691108	Screw (Control Bracket)			
			192	690083	Adjuster-Rocker Arm			
			209	793339	Spring-Governor (Light Green) Used on Type No(s). 0027, 0471, 1039, 1208. ----- Note ----- 793341 Spring- Governor (Silver) Used on Type No(s). 0505.			
					793527 Spring- Governor (Red) Used on Type No(s). 0112.			
					793339 Spring- Governor (Light Green) (Used Before Code Date 10072300). Used on Type No(s). 0006, 0016, 0025, 0026, 0125, 0126, 0127.			
					793340 Spring- Governor			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-12 Assemblies include all parts shown in frames. 01/09/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		796658 Spring-Governor (Yellow/Brown) (Used Before Code Date 10072300). Used on Type No(s). 0046, 0047, 0135, 0136, 0137, 0142, 1406.	211	691019	Spring-Governed Idle (No Color) ----- Note ----- 691019 Spring-Governed Idle (No Color) (Used After Code Date 10072200). Used on Type No(s). 0035, 0036, 0037, 0046, 0047, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0147, 1272, 1406.	217	799771	Spring-Choke Return
209A	798921	Spring-Governor (Orange) Used on Type No(s). 0001, 0003, 0152, 1583, 1604, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5136, 5137, 5142, 5143, 5583. ----- Note ----- 799171 Spring-Governor (Light Blue) Used on Type No(s). 0121, 0145, 0146, 0148, 0149, 0151, 2138, 2141, 5121, 5138, 5141, 5145, 5146, 5147, 5148, 5149. 798921 Spring-Governor (Orange) (Used After Code Date 10072200). Used on Type No(s). 0006, 0016, 0025, 0026, 0035, 0036, 0037, 0046, 0047, 0111, 0120, 0125, 0126, 0127, 0128, 0135, 0136, 0137, 0142, 0143, 1272, 1406. 799171 Spring-Governor (Light Blue) (Used After Code Date 10072200). Used on Type No(s). 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406.	212	695238	Link-Throttle	219	793338	Gear-Governor
			213	691021	Bracket-Choke Control	220	799772	Washer (Governor Gear)
			216	691022	Link-Choke (Manual Choke Link)	221	841026	Cup-Governor
			216A	796229	Link-Choke (Choke-A-Matic Link) Used on Type No(s). 0003, 0035, 0036, 0037, 0121, 0135, 0136, 0137, 0142, 0148, 1583, 3135, 3136, 3137, 5121, 5136, 5137, 5142, 5148, 5583.	222	698761	Bracket-Control (Manual Choke) Used on Type No(s). 0006, 0016, 0025, 0026, 0027, 0111, 0112, 0120, 0125, 0126, 0127, 0471, 0505, 1039, 1208.
			216B	796879	Link-Choke (EFM Choke Link) Used on Type No(s). 0001, 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 0152, 1272, 1406, 1604, 2138, 2141, 2143, 2406, 3047, 4406, 5046, 5138, 5141, 5143, 5147.	222A	796630	Bracket-Control (Manual Choke) (Used Before Code Date 10072300). Used on Type No(s). 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406.
						222B	796226	Bracket-Control (Choke-A-Matic) (Used Before Code Date 10072300). Used on Type No(s). 0035, 0036, 0037, 0135, 0136, 0137, 0142.
						222C	798916	Bracket-Control (V3 Manual Choke) Used on Type No(s). 0001, 0145, 0146, 0149, 0151, 1604, 2138, 2141, 2143, 2406, 3047, 4406, 5046, 5138, 5141, 5143, 5145, 5146, 5147, 5149. ----- Note ----- 798916 Bracket-Control (V3 Manual Choke) (Used After Code Date 10072200). Used on Type No(s). 0046, 0047, 0128, 0129, 0138, 0140, 0141, 0143, 0147, 1272, 1406.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222D	592555	Bracket-Control Used on Type No(s). 0003, 0035, 0036, 0037, 0121, 0135, 0136, 0137, 0142, 0148, 0152, 1583, 3135, 3136, 3137, 5121, 5136, 5137, 5142, 5158, 5583.	306A	798855	Shield-Cylinder (Cylinder 2) ----- Note ----- 591666 Shield- Cylinder (Cylinder 2) Used on Type No(s). 0001, 0003, 0152, 4406, 5046.	337	491055s	Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0138, 0140, 0141, 0142, 0145, 0146, 0505, 2138, 2141, 5138, 5141, 5142, 5145, 5146.
227	798856	Lever-Governor Control	307	691003	Screw (Cylinder Shield)			792015 Plug-Spark Used on Type No(s). 0001, 0112.
231	690718	Screw (Choke Valve)	307A	691108	Screw (Cylinder Shield)			696202 Plug-Spark Used on Type No(s). 1039, 1208, 1272, 1406, 2406, 4406.
239	792028	Switch-Oil Pressure ----- Note ----- 697049 Switch-Oil Pressure Used on Type No(s). 0111, 0112, 0128, 0143, 2143.	309	795121	Motor-Starter ----- Note ----- 497595 Motor-Starter Used on Type No(s). 1406, 1604, 2406, 4406.			793541 Plug-Spark Used on Type No(s). 0003, 1583, 1604, 5583.
240	695666	Filter-Fuel	309A	590476	Motor-Starter Used on Type No(s). 0001, 0003, 0151, 0152, 3047, 3135, 3136, 3137, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.	358	694012	Gasket Set-Engine
250	690957	Retainer-Breather				363	19203	Puller-Flywheel
252	794389	Collector-Oil				377	690979	Key-Woodruff
265	691024	Clamp-Casing				383	19576s	Wrench-Spark Plug
267	792629	Screw (Casing Clamp)				385	797409	Screw (Fuel Pump Mounted On Blower Housing) ----- Note ----- 691108 Screw (Fuel Pump Mounted On Fuel Pump Bracket)
276	695410	Washer-Sealing				387	808656	Pump-Fuel
278	792651	Washer (Governor Control Lever)				404	690442	Washer (Governor Crank)
287	697820	Screw (Dipstick Tube)	310	691263	Screw (Starter Motor) ----- Note ----- 690323 Screw (Starter Motor) Used on Type No(s). 1406, 1604, 2406.	405	697820	Screw (Backplate)
300	696226	Muffler				415	794903	Plug
304	591669	Housing-Blower (Grey) ----- Note ----- 591668 Housing- Blower (Black) Used on Type No(s). 0001, 0003, 0152, 5046.	311	497608	Brush Set	418	795912	Plate-Carburetor
			318	691127	Screw (Mounting Bracket)	431	798860	Elbow-Intake
			318A	792629	Screw (Electronic Choke Module To Bracket)	445	792105	Filter-Air Cleaner Cartridge
305	691005	Screw (Blower Housing)	332	691059	Nut (Flywheel)	447	691003	Screw (Air Guide Cover)
305A	790690	Screw (Blower Housing to Intake Elbow)	333	799651	Armature-Magneto	462	691261	Washer (Starter Cable)
306	796852	Shield-Cylinder (Cylinder 1)	334	691061	Screw (Magneto Armature)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-14 Assemblies include all parts shown in frames. 01/09/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
467	790697	Knob-Air Cleaner	552	690552	Bushing-Governor Crank	628	691108	Screw (Fuel Pump Bracket) (Used Before Code Date 06072800).
474	696457	Alternator (5/9 Amp. Regulated Or Tri Circuit)			----- Note ----- 796638 Bushing-Governor Crank	633	690998	Seal-Choke/Throttle Shaft
474A	696458	Alternator (10-16 Amp. Regulated) ----- Note ----- 592830 Alternator (10-16 Amp. Regulated) Used on Type No(s). 0001, 0003, 0152, 4406, 5046.			Used on Type No(s). 0001, 0003, 0006, 0035, 0036, 0037, 0046, 0047, 0120, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1208, 1272, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.			----- Note ----- 699813 Seal-Choke/Throttle Shaft Used on Type No(s). 0001, 0003, 0006, 0035, 0036, 0037, 0046, 0047, 0121, 0125, 0126, 0127, 0128, 0129, 0135, 0136, 0137, 0138, 0140, 0141, 0142, 0143, 0145, 0146, 0147, 0148, 0149, 0151, 0152, 1406, 1583, 1604, 2138, 2141, 2143, 2406, 3047, 3135, 3136, 3137, 4406, 5046, 5121, 5136, 5137, 5138, 5141, 5142, 5143, 5145, 5146, 5147, 5148, 5149, 5583.
493	797176	Bracket-Electronic Choke Module						
501	794360	Regulator (5/9 Amp Regulated)						
501A	845907	Regulator (10-16 Amp. Regulated)						
503	691532	Strap-Starter						
505	691029	Nut (Governor Control Lever)						
510	696541	Drive-Starter						
512	796530	Hose-Oil Drain	552A	690553	Bushing-Governor Crank			
513	692024	Clutch-Drive	562	690311	Bolt (Governor Control Lever)			
523	691036	Dipstick	563	799359	Screw (Debris Guard)			
524	691032	Seal-Dipstick Tube	573	790444	Plate-Back			
525	691037	Tube-Dipstick	578	691208	Wire Assembly (18" Used On Cylinder #2 Mounted Regulator) ----- Note ----- 797463 Wire Assembly (14" Used On Cylinder #1 Mounted Regulator)			
526	691129	Screw (Regulator)	579	691029	Nut (Starter Cable)			
526A	691108	Screw (Regulator)	601	791850	Clamp-Hose (Green) ----- Note ----- 691038 Clamp-Hose (Black)			
			613	690341	Screw (Muffler)			
			613A	690297	Screw (Muffler)			
			615	698290	Retainer-Governor Shaft			
			616	691045	Crank-Governor			
			617	697891	Seal-O Ring (Intake Manifold)			
						635	692076	Boot-Spark Plug ----- Note ----- 66538s Boot-Spark Plug Used on Type No(s). 0003, 0152.
						640	796913	Thermistor
						654	690958	Nut (Carburetor)
						668	691500	Spacer
						668A	691215	Spacer
						672	690234	Gasket-Carburetor Plate
						676	697816	Deflector-Muffler
						677	691660	Screw (Deflector)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

44Q700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
691	790574	Seal-Governor Shaft	789D	797492	Harness-Wiring	868	690968	Seal-Valve
695	693149	Screw (Ring Gear)			Used on Type No(s). 0128, 0129, 0143, 0147, 2143, 5143, 5147.	877	393537	Wire/Connector- Alternator
697	591909	Screw (Drive Cap)				877A	399916	Wire/Connector- Alternator
703	691010	Clip	789E	796960	Harness-Wiring	877B	790544	Wire/Connector- Alternator
718	690959	Pin-Locating			Used on Type No(s). 1272.	878	691955	Harness- Alternator
726	499612	Gear-Ring	789F	591392	Harness-Wiring	883	690970	Gasket-Exhaust
729	694123	Clip-Wire			Used on Type No(s). 0006, 0016, 0035, 0036, 0037, 0125, 0135, 0136, 0137, 0145, 0146, 0148, 0149, 0151, 0152, 3135, 3136, 3137, 5136, 5137, 5145, 5146, 5148, 5149.	914	691127	Screw (Rocker Cover)
729A	797454	Clip-Wire				918	793147	Hose-Vacuum (Formed)
741	690980	Gear-Timing				918A	797408	Hose-Vacuum (Length 3.2 Inches)
742	690328	Retainer-E Ring						----- Note ----- 694000 Hose-Vacuum (Length 1.6 Inches)
750	696999	Screw (Oil Pump Cover) (Used Before Code Date 08071800).	789G	591393	Harness-Wiring	918B	799160	Hose-Vacuum (Length 9.4 Inches)
750A	796208	Screw (Oil Pump Cover) (Used After Code Date 08071700).			Used on Type No(s). 0025, 0026, 0111, 0112, 0120, 0121, 0142, 5121, 5142.	929	695239	Screw (Choke Control Bracket)
783	695708	Gear-Pinion	789H	591394	Harness-Wiring	934	592604	Screw (Fan Mounting)
788	691039	Bracket-Fuel Pump (Used Before Code Date 06072800).			Used on Type No(s). 0003, 1583, 5583.	943	690589	Seal-O Ring (Oil Pump Cover) (Used Before Code Date 08071800).
788A	793145	Bracket-Fuel Pump (Used After Code Date 06072700).	789J	796914	Harness-Wiring	943A	796222	Seal-O Ring (Oil Pump Cover) (Used After Code Date 08071700).
789	698330	Harness-Wiring Used on Type No(s). 0027, 0126, 0127.			Used on Type No(s). 0001, 0046, 0047, 0129, 0140, 0143, 2138, 2143, 2406, 3047, 4406, 5046, 5141, 5143.	947	798779	Solenoid-Fuel
789A	696576	Harness-Wiring Used on Type No(s). 0471, 0505, 1039, 1208.	797	693167	Nut (Brush Retainer)	949	798767	Guard-Debris Screen
789B	695050	Harness-Wiring Used on Type No(s). 0006, 0016, 0025, 0026, 0027, 0035, 0036, 0037, 0046, 0047, 0121, 0125, 0126, 0127, 0135, 0136, 0137, 0152, 3047, 3135, 3136, 3137, 5046, 5121, 5136, 5137.	798	697890	Screw (Rocker Arm)	964	799159	Cap-Connector
			801	691283	Cap-Drive	965	499613	Cover-Oil Pump (Used Before Code Date 08071800).
			802	691286	Cap-End	965A	796221	Cover-Oil Pump (Used After Code Date 08071700).
			842	691031	Seal-O Ring (Dipstick Tube)			
			850	100106	Sealant-Liquid			
			851	493880s	Terminal-Spark Plug			
			865	591667	Cover-Air Guide (Valley)			
789C	796860	Harness-Wiring Used on Type No(s). 0001, 0046, 0047, 0138, 0140, 0141, 1406, 1604, 2138, 2141, 2406, 3047, 4406, 5046, 5138, 5141.						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3533-16 Assemblies include all parts shown in frames. 01/09/2014

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
967	792303	Filter-Pre Cleaner	1026	690981	Rod-Push (Steel)	1124	690988	Seal-O Ring (Fuel Transfer Tube)
968	795120	Cover-Air Cleaner (Black)	1026A	690982	Rod-Push (Aluminum)	1124A	841653	Seal-O Ring (Fuel Transfer Tube)
		----- Note -----	1027	795890	Filter-Oil (Yellow)	1126	690991	Screw (Fuel Transfer Tube)
		798584 Cover-Air Cleaner (Grey)			----- Note -----	1127	695407	Screw (Float Bowl)
975	798778	Bowl-Float/Solenoid			798576 Filter-Oil (Orange)	1128	690990	Screw (Carburetor Nozzle)
975A	799114	Bowl-Float	1029	690972	Arm-Rocker	1169	690990	Screw (Carburetor Cover Plate)
987	691000	Seal-Throttle Shaft	1029A	807323	Arm-Rocker	1319	794467	Label-Warning
1005	791236	Fan-Flywheel	1036		Label-Emissions (Available from a Briggs and Stratton Authorized Dealer)	1319A	797669	Label-Warning
1012	592556	Retainer-Link			Used on Type No(s). 2406, 4406.	1330	273521	Repair Manual
1013	690954	Nipple-Oil Filter	1040	791237	Plate-Trim (Black)	1436	796918	Motor-Stepper
1017	690770	Screen-Oil Pump (Used Before Code Date 08071800).			----- Note -----	1437	699891	Screw (Stepper/Bracket Motor)
1017A	796214	Screen-Oil Pump (Used After Code Date 08071700).			798585 Plate-Trim (Orange)			----- Note -----
1022	690971	Gasket-Rocker Cover			Used on Type No(s). 2406, 4406.			695239 Screw (Stepper/Bracket Motor)
1023	793146	Cover-Rocker (Cylinder 1) (Used After Code Date 06072700).	1051	691265	Ring-Retaining			Used on Type No(s). 0001, 0003, 0152, 4406, 5046.
		----- Note -----	1054	280275	Tie-Cable	1438	796352s	Module-Electronic Choke
		499599 Cover-Rocker (Cylinder 1) (Used Before Code Date 06072800).	1058	381258TRI	Operator's Manual	1439	794904	Screw (Thermistor Bracket)
1023A	499600	Cover-Rocker (Cylinder 2)	1059	698516	Kit-Screw/Washer			
1024	794644	Pump-Oil (Used Before Code Date 08071800).	1070	791680	Screw (Flywheel Fan)			
1024A	796220	Pump-Oil (Used After Code Date 08071700).	1090	691293	Retainer-Brush			
			1095	694013	Gasket Set-Valve			
			1100	791959	Pivot-Rocker Arm			
			1119	691183	Screw (Alternator)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

