

90 DAY LIMITED WARRANTY

Winegard Company warrants this Winegard product against any defects in materials or workmanship within 90 (ninety) days from date of purchase. No warranty claim will be honored unless at the time the claim is made, you present proof of purchase to an authorized Winegard dealer (if unknown, please contact Winegard Company, 3000 Kirkwood Street, Burlington, IA 52601-2000, Telephone 319-754-0600).

Winegard Company (at its option) will either repair or replace the defective product at no charge to you. This warranty covers parts, but does not cover any costs incurred in removal, shipping or reinstallation of the product. This limited warranty does not apply if the product is damaged, deteriorates, malfunctions or fails from: misuse, improper installation, abuse, neglect, accident, tampering, modification of the product as originally manufactured by Winegard, usage not in accordance with product instructions or acts of nature such as damage caused by wind, lightning, ice or corrosive environments such as salt spray and acid rain.

The 90 Day Warranty is provided on the condition that the equipment is properly delivered with all handling and freight charges prepaid to your Winegard dealer for return to our factory for repair or replacement. Winegard dealers will arrange for the replacement or repair and return to you without charge the product which failed due to defective material or workmanship.

WINEGARD COMPANY WILL NOT ASSUME ANY LIABILITIES FOR ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, MADE BY ANY OTHER PERSON.

ALL OTHER WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIMITED TO THE 90-DAY PERIOD OF THIS WARRANTY.

The foregoing shall be the sole and exclusive remedy of any person, whether in contract, tort or otherwise, and Winegard shall not be liable for incidental or consequential damage or commercial loss, or from any other loss or damage except as set forth above.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion of limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



WINEGARD®


High Definition (HD) Platinum Antennas

INSTRUCTIONS


VHF/UHF MODELS

HD7078P, HD7080P, HD7082P


HD4053P (VHF ONLY)

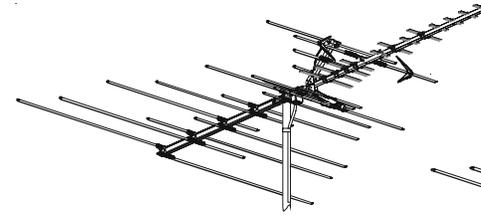


VHF/UHF
MODEL HD7082P

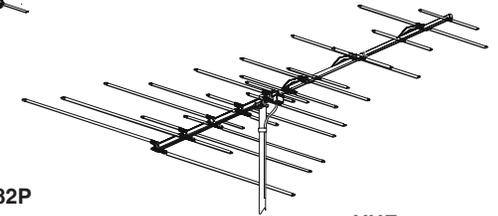

VHF
MODEL HD4053P

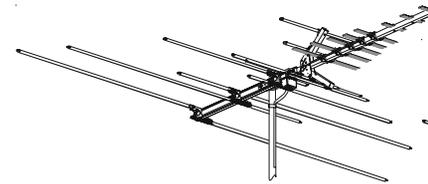

VHF/UHF
MODEL HD7078P

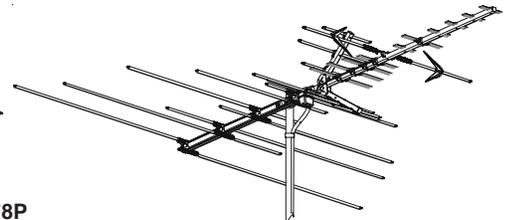

VHF/UHF
MODEL HD7080P

WARNING

INSTALLATION OF THIS ANTENNA NEAR POWER LINES IS DANGEROUS.
FOR YOUR SAFETY, FOLLOW THE INSTALLATION INSTRUCTIONS.


NOTE:

To prevent damage in shipping, the second set of elements from the rear of the boom are folded to the reverse side. You can identify the second from the rear by the tags attached to them. Follow the directions on the tags carefully.


STEP 1. Remove the rear section of antenna from carton (long elements). Unfold elements approximately 30°.

HD7080P, HD7082P & HD4053P ONLY

STEP 2. Grasp both sides of the second element from the rear of the boom. Lift the ends of the element just enough to slide over the other elements to the front and rear and **ROTATE ABOUT 90° COUNTER CLOCKWISE**. See Figure 1.

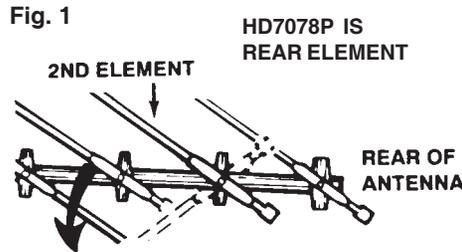

STEP 3. Spread all elements to the lock position, being sure to alternate the elements. See Figure 2.

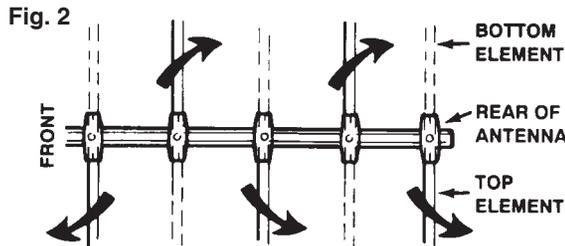

STEP 4. Turn the antenna over and repeat steps one (1) through three (3).


HD7080P & HD7082P ONLY

STEP 5. Unfold UHF directors. See Figure 3.




**HD7082P SEE FIG. 4
HD4053P SEE FIG. 4A**

STEP 6. Unfold the elements of the front section of the antenna. Remove the bolt, hex nut, and element from the tapered end of the front boom and slide the tapered end into the front of the rear boom. The cartridge housing on rear section should be on the bottom of the rear boom. Replace bolt, hex nut, and element, tighten securely.

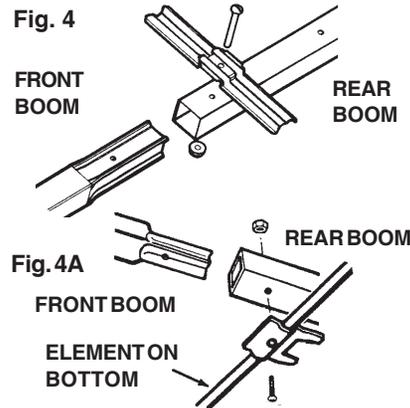


HD7078, HD7080, & HD7082 ONLY

STEP 7. Unfold the elements on the reflector booms first. Then unfold the reflector booms slowly until they lock in place. See Figure 5.

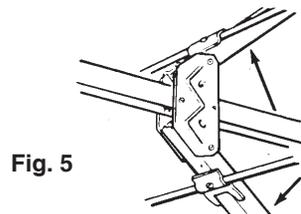


STEP 8. To attach the cartridge housing to the antenna, align the snaps on the cartridge housing with the snap holes on the cartridge housing receptacle on the antenna and push the housing into the receptacle until it snaps into place. See Figure 6.

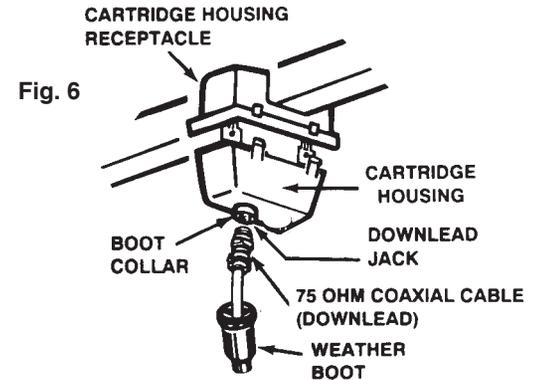

STEP 9. Attach the 75 ohm coaxial download cable to the "download" connection on the cartridge housing. See Figure 6. Slide weather boot over connectors and boot collar.

STEP 10. Loosen nuts on the mast clamp, slide the antenna over the end of the mast. Point the front of the antenna (small end) towards stations and tighten mast clamp securely. See Figure 7.

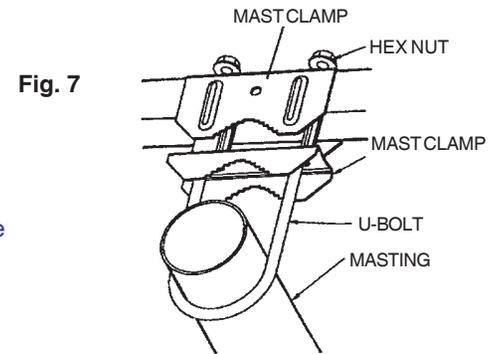

STEP 11. The 75 ohm coaxial cable download may be secured to the mast by taping or by using plastic wire ties.

HOW TO PROVIDE LIGHTNING PROTECTION FOR TV ANTENNA AND SET

Step 1. Mount the lightning arrester as close as possible to where the 75 ohm coaxial cable download enters the house. See Figure 8.

Step 2. The ground wires for both the mast and the download should be copper or aluminum wire, number eight (8) or larger. See Figure 8.

Step 3. The download wire from the antenna to the lightning arrester and the mast ground wire should be secured to the house, spaced from four (4) to six (6) feet apart. See Figure 8.

NOTE: In the case of a "ground up" antenna installation, it may not be necessary to ground the mast if the mast extends four or more feet into the earth. Consult a TV serviceman for the proper depth in your location.

Fig. 8 Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70

